
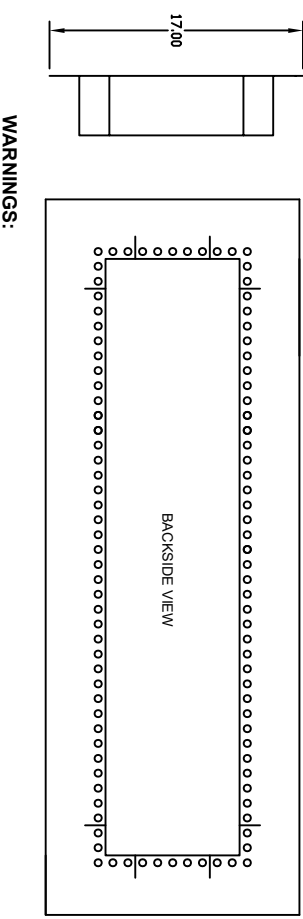
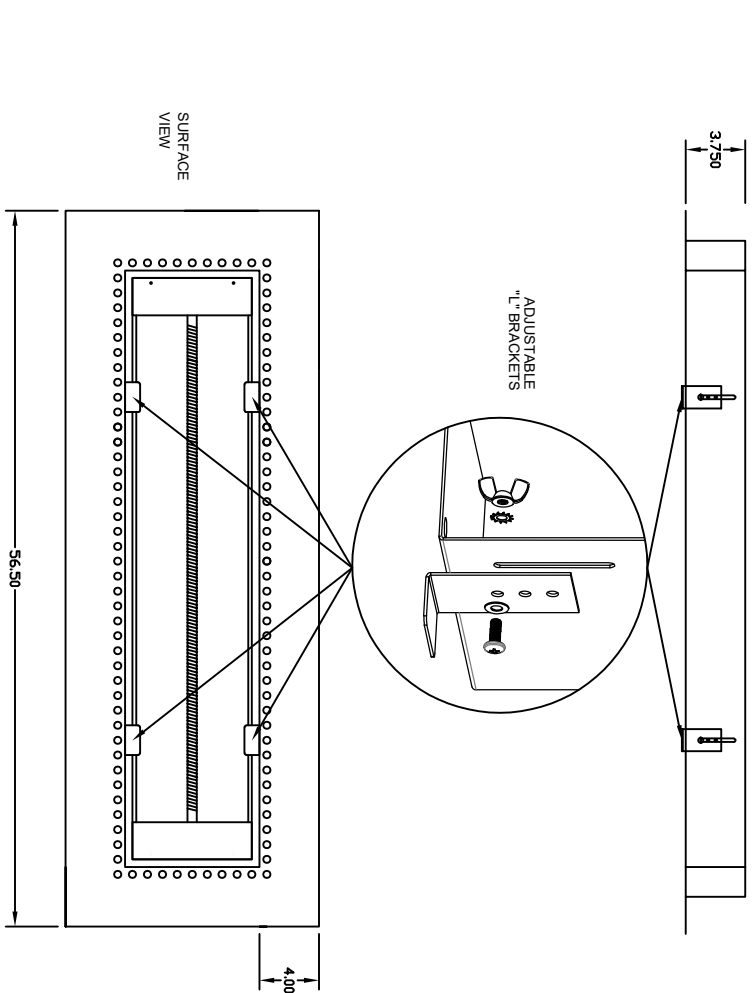


INSTALLATION TYPES

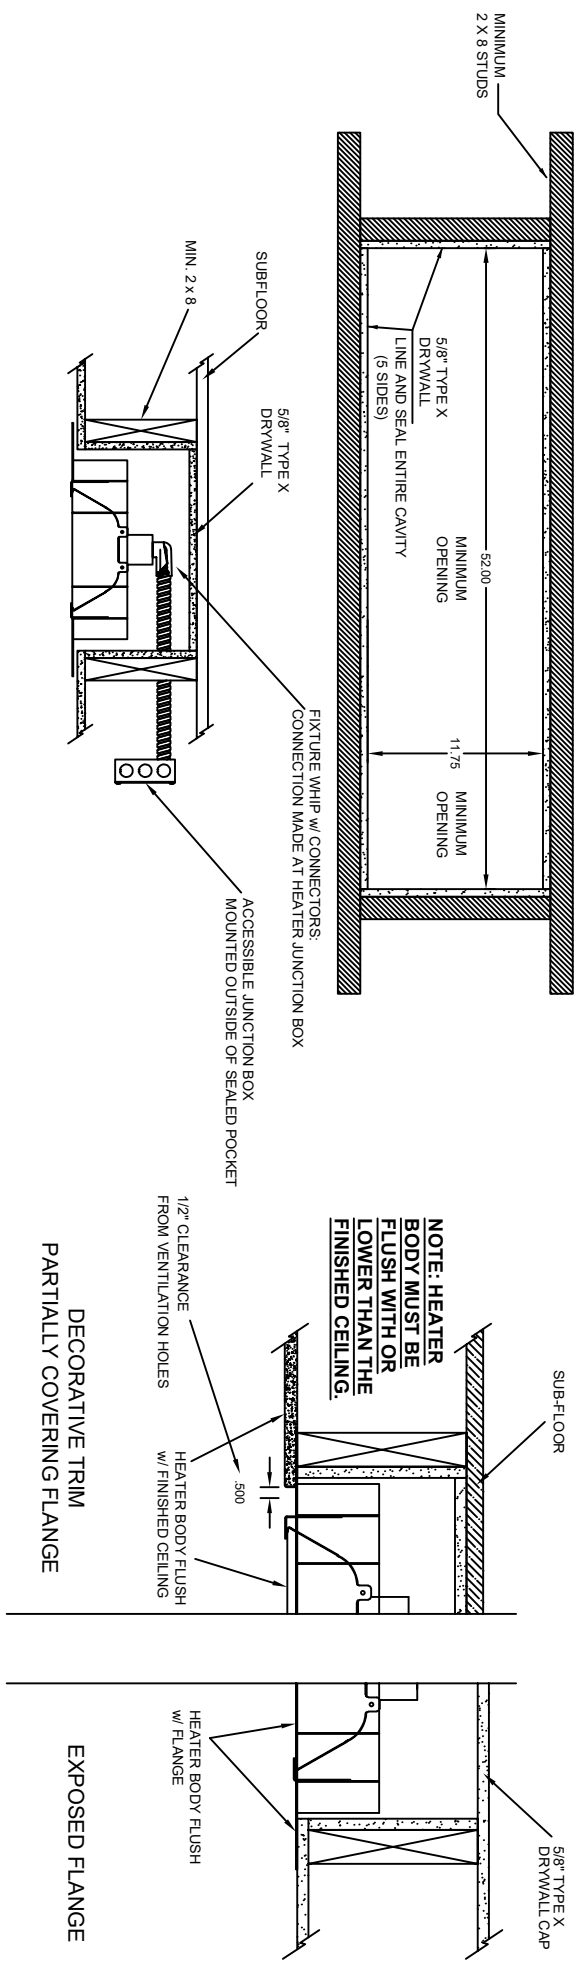

WARNINGS:

- Do not use Surface Mount Brackets. This Frame is ONLY to be used on a flat non-sloped ceiling.
- Heater Body must face straight down and be flush with the finished ceiling.
- Frame and Heater cannot be installed on a pitched angle.
- Accessible Junction Box must be installed outside of sealed drywall pocket.
- Must use 5/8" type "X" drywall.
- Must use supplied 4 foot Hi-Temp Fixture Whip and Hi-Temp Ceramic Wire Nuts. Please contact factory for longer length.
- Hi-Temp Fixture Whips available for purchase.
- Discard Surface Mounting Brackets provided with Heater and use "L" Brackets.
- Use Licensed Electrician ONLY.

NOTES:

- Heater suspends (Gravity) by resting on adjustable "L" Brackets in flush mount fixture.
- Mounting holes on Surface Flange to be determined and drilled by Contractor/Installer.
- Coil excess flex into heater cavity.

After 4 hours of continuous use, a 15 minute cool down period is recommended for maximum heater longevity. See controls brochure for timer options.

| | | | |
|-----------------------------------------|----------------------------------|------------------------------------------------------------------------------|--------------------|
| INFRA TECH www.infra.tech.com | | InfraTech 344 W/ 157th Street Gardena, CA 90248 Phone: 310-354-1250 | |
| ITEM #: | 18-2302 | MATERIAL: | 304 S.S. #4 FINISH |
| DESCRIPTION: | 48" FLUSH MOUNT TRIM KIT | | |
| NOTES: | SUPPLIED w/ HI-TEMP FIXTURE WHIP | | |
| DATE: | Aug. 1, 2024 | SCALE: | N/A |
| | | DRAWN BY: | MD |